

**SGC**




**SGC BLOCK**

**LIFT KIT**

**FITS EZGO MARATHON, ELEC**


**LIFT KIT INSTALLATION INSTRUCTIONS  
EZGO MARATHON ELEC, 80-94**

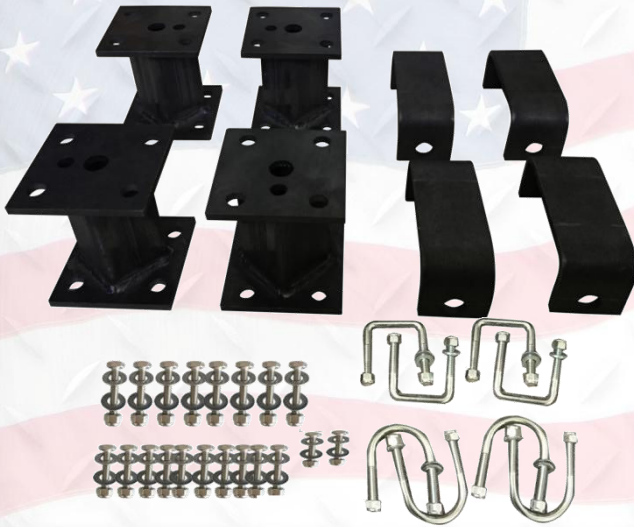


Hardware	
3/8" x 1-1/2" Bolts	8
3/8" x 1-1/4" Bolts	10
3/8" x 1" Bolts	2
3/8" Top U-Bolts	4
3/8" x 1-7/8" Bottom U-Bolts	4
3/8" Lock Nuts	36
3/8" Flat Washers	56

**Rear Installation:**

Raise the rear as high as possible and place jack stands to support the car.  
 Remove the tires, rear body inspection cover and top shock mounts and keep the hardware.  
 Place a floor jack under the rear axle. Remove the mounting U-bolts, lower the axle and install the risers to the springs.  
 Make sure the centering pins are in place as you tighten the U-bolts.  
 Install the axle assembly to the riser with the new hardware U-bolts.  
 Install the shock risers using 2 of the 1" bolts and tighten the shock nuts until the rubber bushing is the same diameter as the washer. Torque the U-bolts to 30 foot pounds.

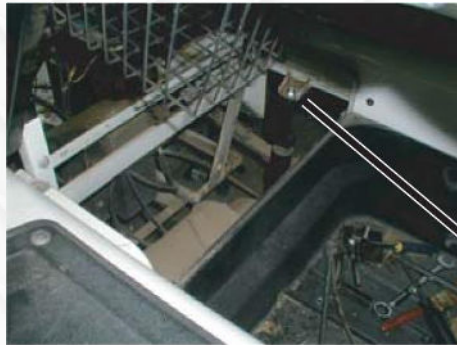

**Access Panel**

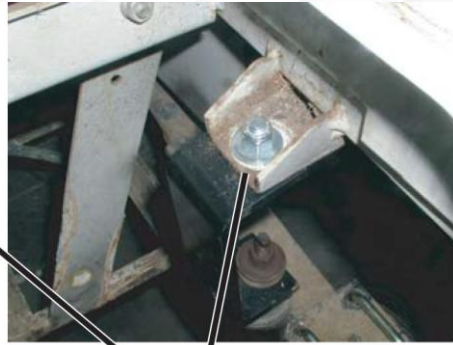

**Shock Riser Bolt**



**risers and u-bolts**






# LIFT KIT INSTALLATION INSTRUCTIONS

## EZGO MARATHON ELEC, 80-94

### Front Installation:

Raise the car as high as possible and place jack stands to support the car. Remove the shock shield and bottom shock nuts, (keep the hardware). Push the shocks up and out of the way. Remove the drag link end (outer) from the spindle arm. It is best to use a seperator tool for this to protect the stud threads. You should break the jam nut loose on the drag link before you remove it. Remove the eight bolts that hold the axle. Remove the axle. Install the riser to the car using 8 of the 1 1/2" bolts (do not tighten) and then install the axle to the riser using 8 of the 1 1/4" bolts. Now, tighten all the bolts. Install the shock extenders using 2 of the 1 1/4" bolts and align to the best angle & clearance. Install the drag link end into the spindle arm the opposite way it was removed. You may need to drill the hole with a 1/2" drill bit down 1/4 of an inch. Torque the nuts and bolts to 30 - 35 foot pounds.

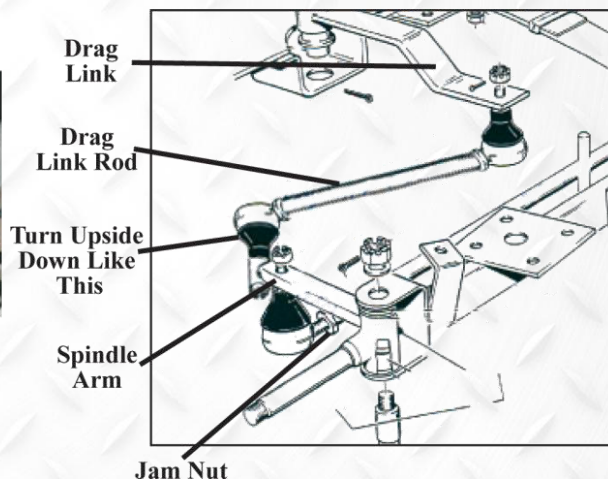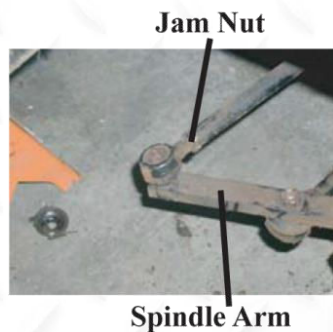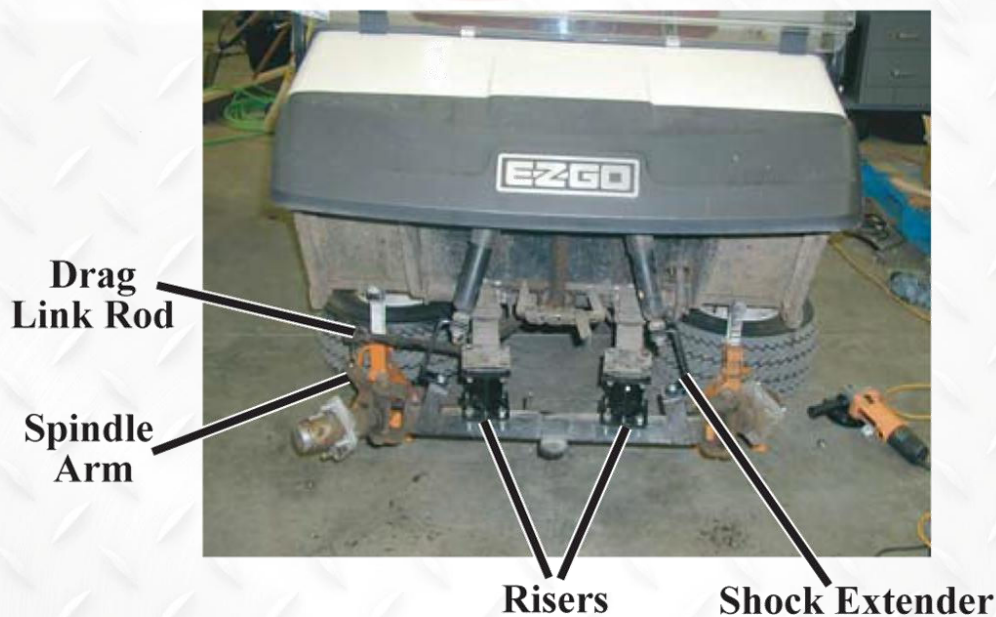



## RETURN MERCHANDISE AUTHORIZATION

Dear Valued Customer,

Thank you for choosing Steeleng Golf Cart Accessories for your golf cart needs.

We apologize for the issues you are having with your purchase. We strive to offer the absolute best quality at the absolute best price.

To best serve you, we do need a little information to help process your return and/or exchange faster.

Please complete the following and include this entire form with your return.

\_\_\_\_\_  
Name

\_\_\_\_\_  
Shipped To Address

\_\_\_\_\_  
STATE

\_\_\_\_\_  
ZIP

Purchased with:

eBay

Direct Phone Order

This is for

EXCHANGE

REFUND

Please describe reason for return:-

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

Our Return Address:

Steeleng Golf Cart Accessories

3309 Laurens Road,

Greenville, SC 29607

Tele: 864-675-1103

\_\_\_\_\_  
For Office Use Only:

Received By: \_\_\_\_\_

Date \_\_\_\_\_

Refund Amount \_\_\_\_\_

Exchange Issued \_\_\_\_\_

\*\*Steeleng Golf Cart Accessories reserves the right to charge a 15% restocking fee for all returned and/or exchanged items.