

SGC




SGC DROP AXLE

LIFT KIT

FITS EZGO MARATHON, ELEC

LIFT KIT INSTALLATION INSTRUCTIONS


EZGO MARATHON ELEC, 80-94

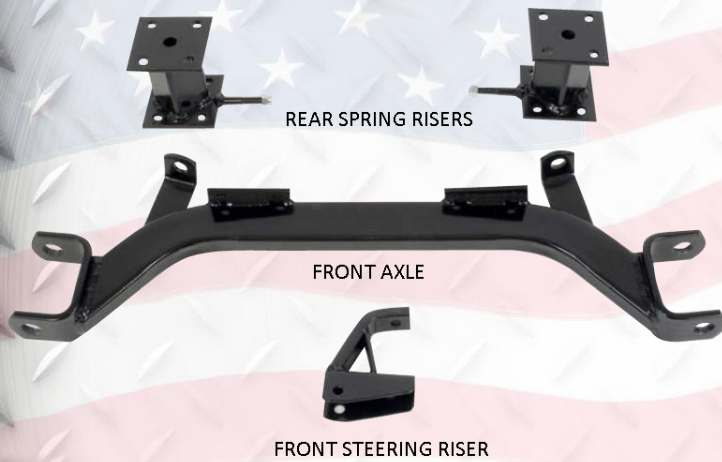

CHECK LIST	Qty
REAR SPRING RISERS	2
FRONT AXLE	1
STEERING RISER	1
U-BOLTS	4
3/8"-16*1 1/2", 3/8"-16*2" WITH LOCK NUTS (FOR FRONT)	1
3/8"-16*2" WITH LOCK NUTS (FOR REAR)	8

FRONT INSTALLATION


1. Jack up the front end of the cart and place it on jack stands. You will be installing larger wheels and tires so raise the cart high enough to accommodate for the additional height.
2. Remove the tie rod joints from the spindles.
3. Remove the spindles from the front axle. Clean and lubricate these bolts for the reinstallation of the spindles.
4. Remove the front axle. Clean and lubricate these bolts for the new axle.
5. Using the bolts from the old axle install front axle.
6. Reinstall the spindles to axle.
7. Install steering riser to the spindle on the passenger side of the cart. (NOTE: On some models you may need to grind both sides of the spindle for this to fit.) The 1 1/2 bolt goes through the existing hole in the spindle. The 2" bolt goes through the remaining hole in the extension. (NOTE: The 2" bolt must be installed with the head toward the tire.)
8. Attach the steering rod end to steering extension.
9. Reattach the tie rods to the spindles.
10. Securely tighten all bolts.
11. Install recommended wheel and tire size (22 x 11 x 10 wheels and tires with a 3+4 offset for maximum performance. **NOTE: Your stock wheels and tires will work but are not recommended!**)
12. Take the cart off of the jack stands and lower the cart.
13. Drive the cart forward 10-20 feet and check the toe-in. (Proper toe-in should be approximately 1/8" in.)

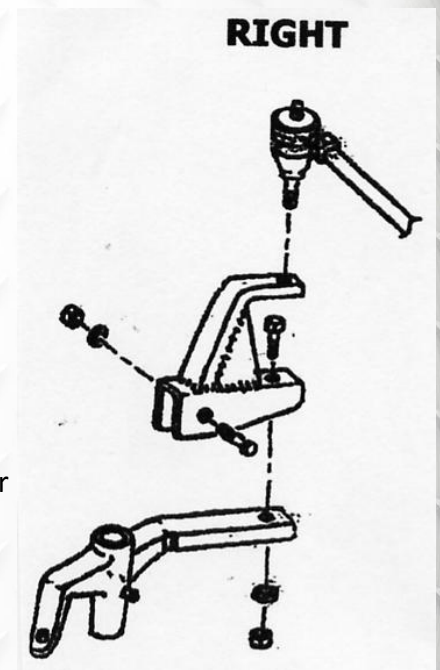

LIFT KIT INSTALLATION INSTRUCTIONS EZGO MARATHON ELEC, 80-94

REAR INSTALLATION

1. Jack up the rear end of the cart and place jack stands on the frame in front of the springs. You will be installing larger wheels and tires so raise the cart high enough to accommodate the additional height.
2. Remove the wheels and tires.
3. Remove the bottom shock bolts and discard.
4. Lower the axle and place rear spring risers between the springs and the axle with the 3/8" bolt for the shock mounts up and towards the center of the cart.
5. Put U bolts around the axle and fasten them to the lift block.
6. Attach the bottom of the shocks to rear spring risers with the provided lock nuts.
7. Install recommended wheel and tire size 22 x 11 x 10 wheels and tires with a 3+4 offset for maximum performance. **NOTE: Your stock wheels and tires will work but are not recommended!**
8. Included is a warning instruction which is to be placed on the steering column or another visible area and is to be read by all operators.
9. Double check all nuts and bolts for tightness.

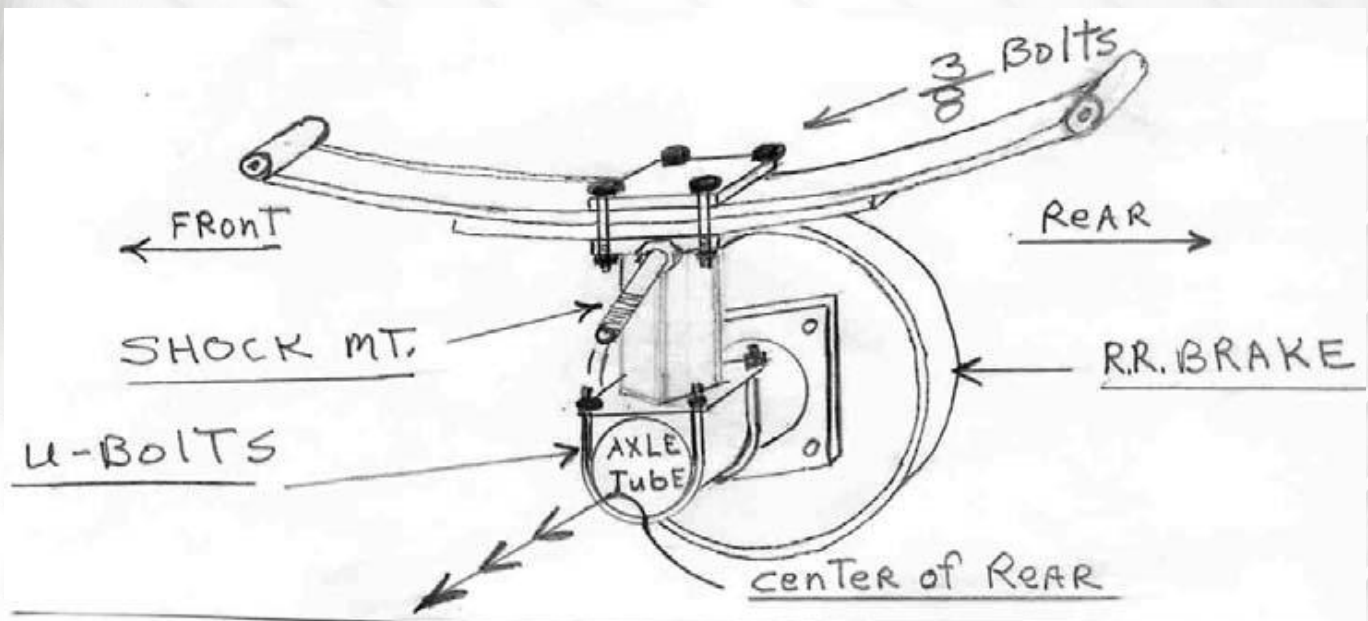



RETURN MERCHANDISE AUTHORIZATION

Dear Valued Customer,

Thank you for choosing Steeleng Golf Cart Accessories for your golf cart needs.

We apologize for the issues you are having with your purchase. We strive to offer the absolute best quality at the absolute best price.

To best serve you, we do need a little information to help process your return and/or exchange faster.

Please complete the following and include this entire form with your return.

Name

Shipped To Address

STATE

ZIP

Purchased with:

eBay

Direct Phone Order

This is for

EXCHANGE

REFUND

Please describe reason for return:-

Our Return Address:

Steeleng Golf Cart Accessories

3309 Laurens Road,

Greenville, SC 29607

Tele: 864-675-1103

For Office Use Only:

Received By: _____

Date _____

Refund Amount _____

Exchange Issued _____

**Steeleng Golf Cart Accessories reserves the right to charge a 15% restocking fee for all returned and/or exchanged items.